


PART 2: ROOFING/SIDING


THIS PART SHOULD BE MOSTLY STRAIGHT FORWARD. USE PLYWOOD TO COVER EVERY SIDE BUT THE FRONT, USE DECK SCREWS TO SECURE THE BOARDS.

WHAT YOU'RE GONNA NEED:


- (4) SHEETS OF OSB PLYWOOD 48" X 8'
- (3) SHEETS OF POLYCARBONATE ROOFING 26" X 8' (ANY COLOR)

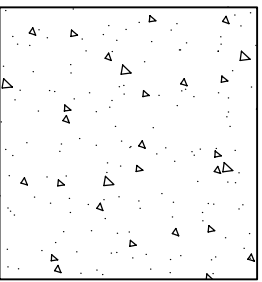

*YOU COULD GET Fancier OR YOU COULD PAINT OVER

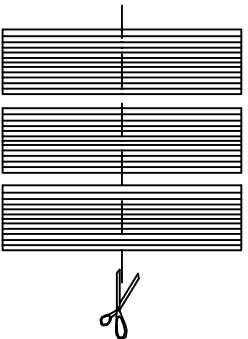


*CUT IN HALF AT 48"

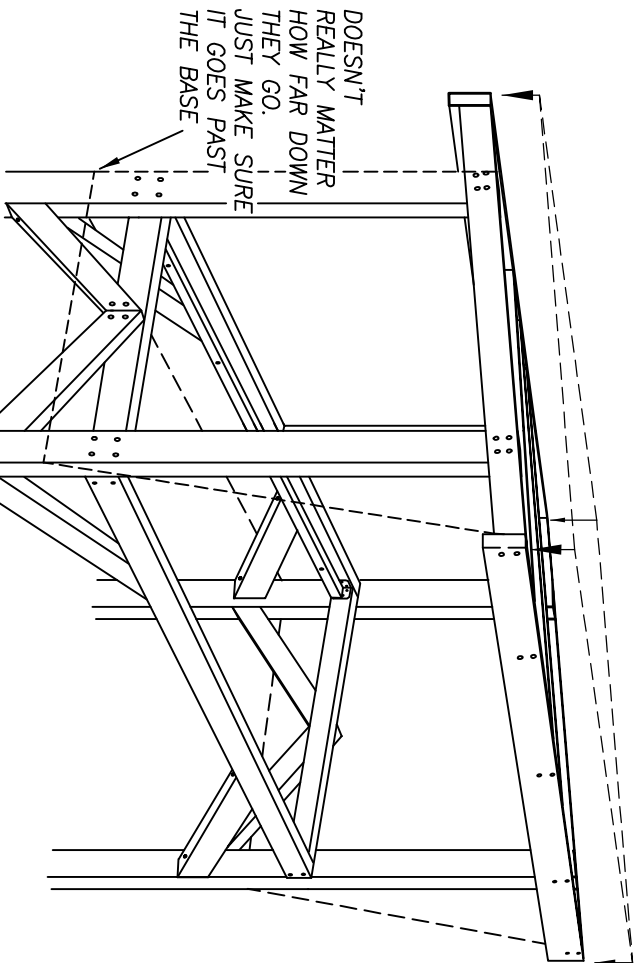


DOESN'T REALLY MATTER HOW FAR DOWN THEY GO. JUST MAKE SURE IT GOES PAST THE BASE

YOUR SIDE PANELS SHOULD LOOK LIKE THIS THIS KEEPS THE WIND CHILL DOWN FROM THE SIDES

(2) 3"X10' VINYL DRIP EDGES

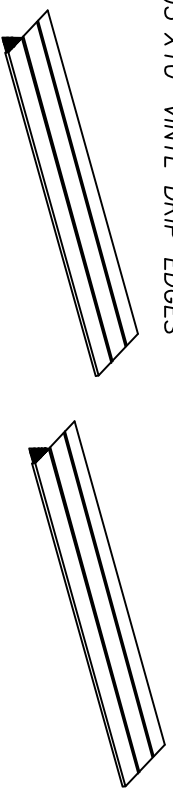

INSTALL BACK DRIP EDGE FIRST BEFORE YOU PUT ON ROOFING

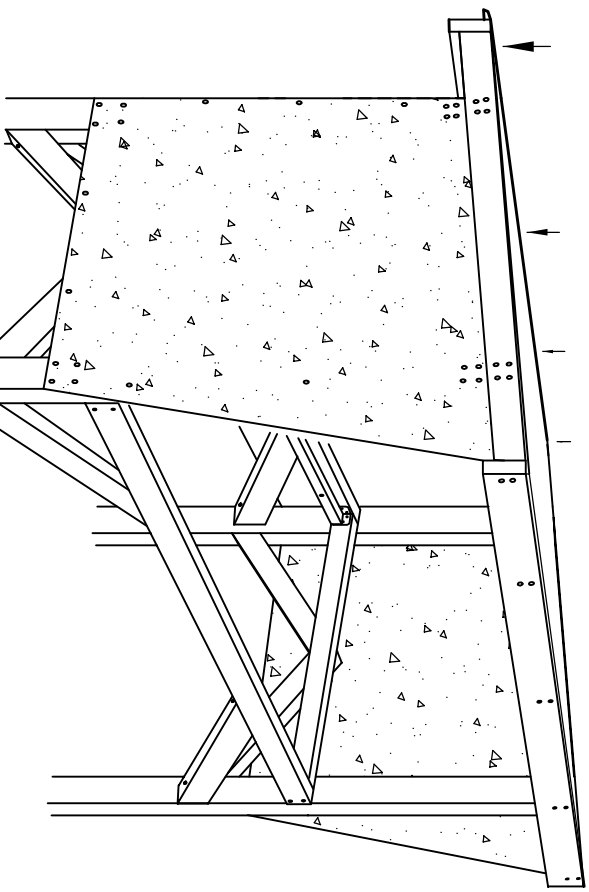

INSTALL FRONT DRIP EDGE OVER POLYCARBON ROOFING

*USE A HEX HEAD SCREW OR DECKING NAIL

